



# Vinyl Installation Tutorial


1. Align to Substrate using Tape to hold in place

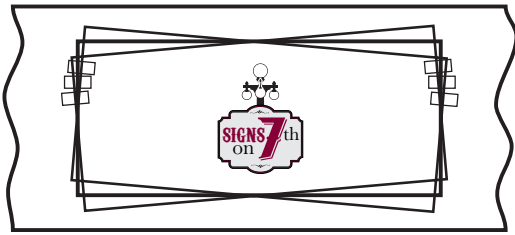


2. Add a Tape Hinge about 2/3rds across

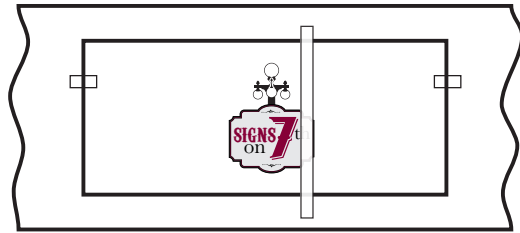


3. Tear through Tape and fold side back

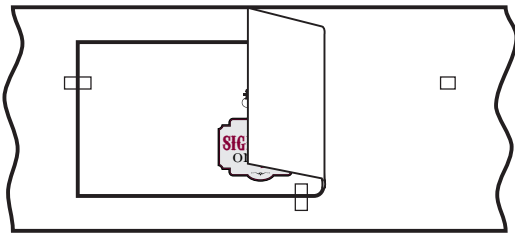


4. Roll the Backing Paper off of the Transfer Tape

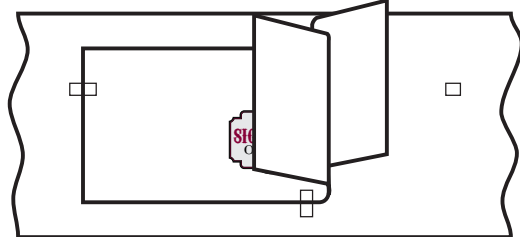


5. Cut off a straight piece from the Backing Paper

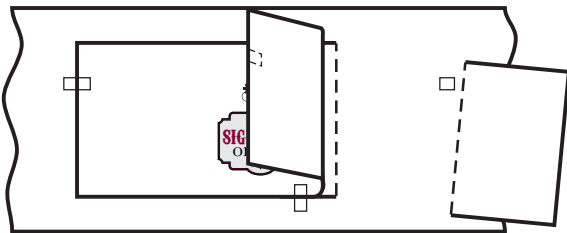


6. Aligning the torn piece of Tape and, holding the end of the Transfer Tape off the Substrate, Burnish the Graphic down.

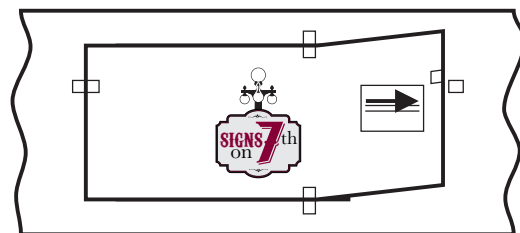

7. Fold back the Graphic and roll the Backing Paper off the Graphic starting at the Cut Line.

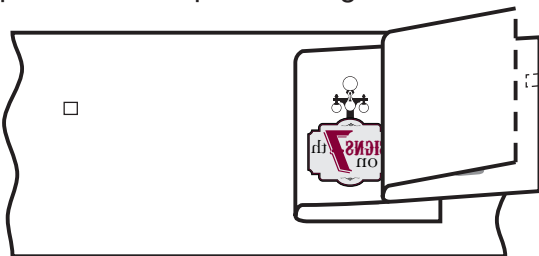

8. Once the Graphic is fully burnished down, remove all tape and peel off the Transfer Tape at a low, sharp angle.

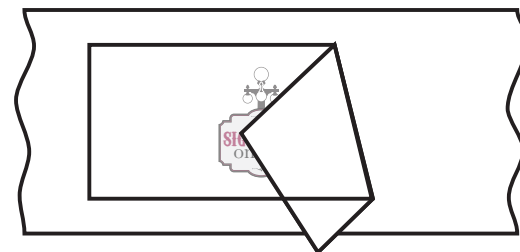

9. Remove any bubbles by using the corner of a razor blade or a sharp pin or needle and a rolling thumb.



**NOTE - HOW TO BURNISH!**

To Burnish, rub the Squeegee using firm, even, angled, overlapping strokes at a downward angle from side to side across the Transfer Tape starting where the Backing Paper was cut.

